

DE212 Filter and antenna kit for improved receiver noise rejection.

RX212



Installasjon av ny antenne og 2,4GHz filter

1. Slå av spenning og demonter mottaker front.
2. Demonter antenne og intern antennekabel/Pigtail.
3. Monter Pigtail som vist på bildet. En skive skal ligge inne i mottaker, den andre på utsiden, som vist.
4. Monter tilbake mottaker front, kople antenne til kretskortet med den nye Pigtail, monter den grønne plugg og skru sammen.




Installation of a new antenna and 2,4GHz filter.

1. Turn of power supply, disconnect and remove front section of the receiver.
2. Disconnect antenna and internal antenna cable/Pigtail.
3. Install new Pigtail as shown at the photo. One washer at each side of the cabinet wall.
4. Install the filter as shown. Tighten with 8mm wrench.
5. Reinstall the receiver front section. Connect the Pigtail to the HF-module and the green 10-pin connector to the main PCB. Fasten the 4 screws to secure the front section of the receiver .

Art.no 02971 Filter and antenna kit RX220 improved noise rejection, List of items

1. 1x 12376, Antenna, omni directional, 2,4GHz
2. 1x 12374 Filter, 2,4GHz bandpass filter
3. 2x 12377, Washer
4. 1x 12375, Pigtail, internal antenna connection

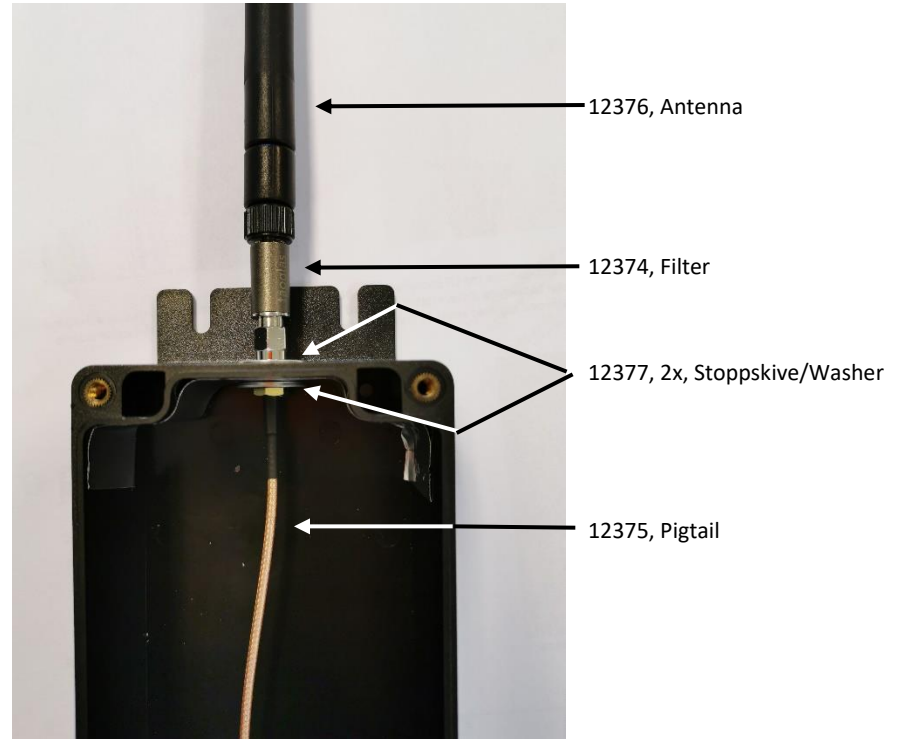

	Rev.	Dato	Beskrivelse	Sign
Emne:				
Overflate:		Målestokk	Dato: 02.09.2019	
Antenna and filter kit RX212 Global			Toleranse	Konstr.:28
			Art.no: 02972	Ren.nr:0
		Tlf:33448390	Mail: hello@deltarc.no	